

# **Steering Wheel Removal and Installation Guide**

Applies to:

2008-2010 Dodge Challenger (All Models)

2005-2010 Chrysler 300 (All Models)

2005-2010 Dodge Charger (All Models)


### Step 1:

Disconnect and isolate the negative (black) battery cable. If you are uncertain of how to do this, refer to your specific vehicles owner manual for more info.

**HELPFUL TIP!** Trunk release is electrical, leave the trunk open while battery is disconnected or you will find yourself locked out of the trunk. There is a mechanical release inside the trunk that you can access by folding down the back seats if nessecary.


### Step 2:

Begin by removing the airbag. There are two screws located behind the steering wheel, one on each side of the steering column. Remove these. They are 10MM. To access this easily I recommend a 10mm socket on a 2 or 4 inch extension.

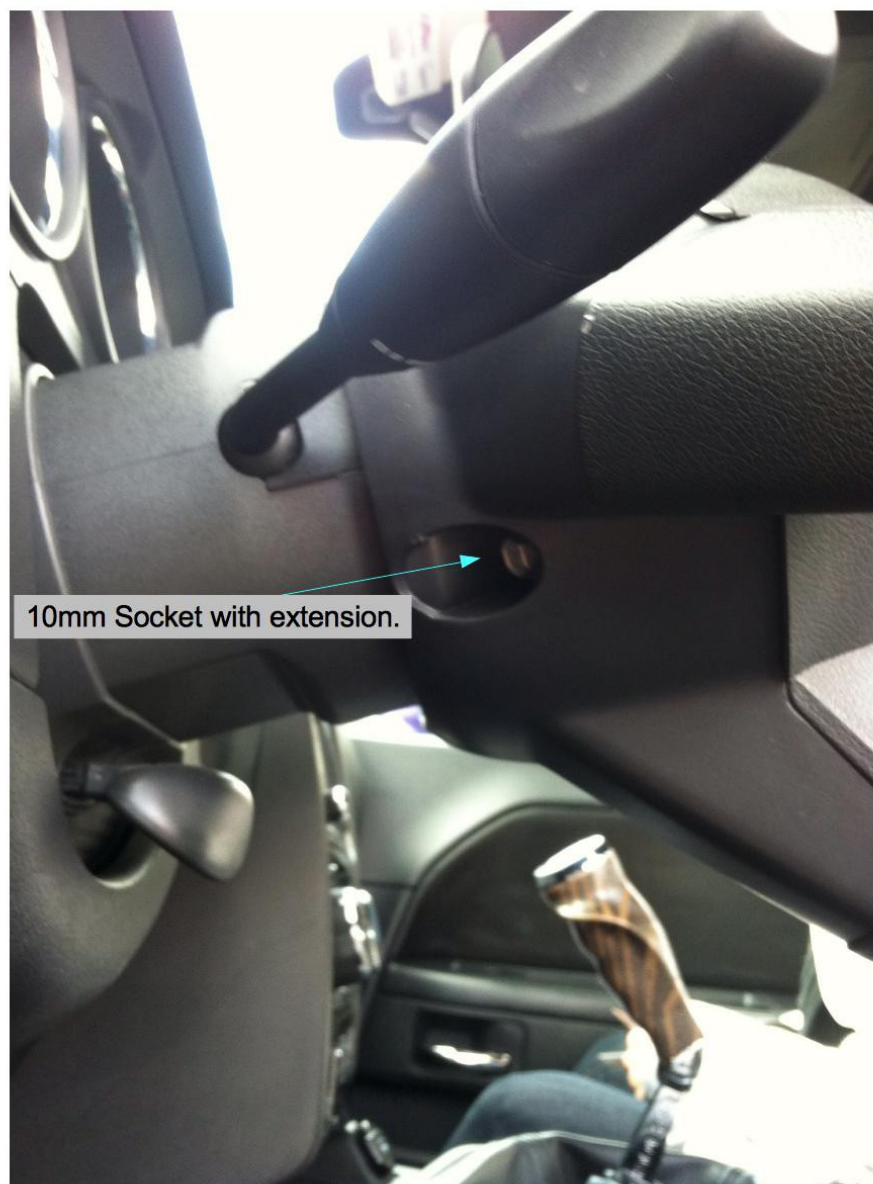

### Step 3:

Carefully pull airbag rearward just far enough to disconnect the two airbag connectors as well as the horn connector. Once these are disconnected completely remove the airbag. TAKE NOTE of where each airbag connector goes.

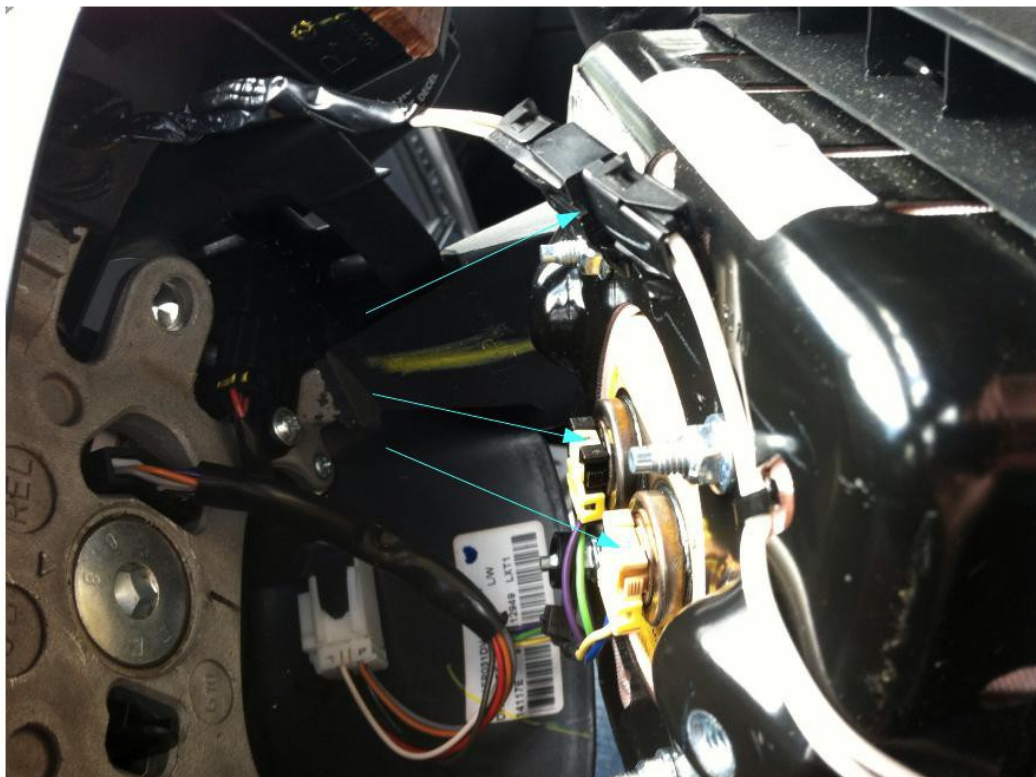

#### Step 4:

Remove the steering wheel retainer bolt at the center of the steering wheel. To do this you will need a 10mm hex socket, 6 inch extension, and wrench. It is torqued and threadlocked, so it will take some effort.



Step 5:

If your vehicle is equipped with steering wheel mounted controls there will be connectors for those right by the clockspring. Disconnect those and then slide the steering wheel off of the steering column

Step 6:



To give yourself a little more room to work around the wheel, remove the steering wheel shroud by removing three screws as well as the cruise control stalk (if equipped) by removing one screw on the front and two on the back

Step 7:

Wrap wheel

Step 8:

Reinstall steering wheel shroud.

Step 9:

Reinstall steering wheel onto steering column. Torque steering wheel retainer bolt to 70 Nm (52 ft. lbs.)

Step 10:

Reinstall airbag. Be sure to make all electrical connections before installing the airbag. Tighten the two airbag bolts to 10 Nm (89in. Lbs.)

Step 11:

Reconnect battery and test horn and all button functionality before operating vehicle.



