

RedlineGoods Armrest Cover Installation Instructions

Disclaimer: Redline Automotive Accessories Corp. (RedlineGoods) will not be held liable for any labor, incidental or consequential damages of any kind. Proceed at your own risk. Read the entire document before proceeding with your installation!

Tools needed:

- Phillips screwdriver
- High temperature spray glue
- Scissors

1. Removing the arm rest - pry open one side of the centre console and gently pull the same side of the arm rest up. This will pop one side of the arm rest out. The other side will also be loose and ready to be removed.
2. Disassemble the armrest - use a Philip screwdriver to remove all the screws.



3. Once the screws are removed you will be able to separate the arm rest. (Place the screws in a safe location so they do not get lost. I recommend keeping them in the cup holder of the car).
4. Test-fit the cover over the armrest – make sure you know your way forward, you don't want to do a lot of trial and error after you've applied glue (next step)!



5. Find a safe, well-ventilated area to perform the oncoming part. Clean the surface of the armrest and de-grease with a proper solvent if necessary. Apply glue on both armrest and the cover. If the cover is made with Alcantara – make sure to use glue sparingly as it's possible for excess glue to seep through the fabric. As for the glue – it's nothing special, any good leather/upholstery glue you can find at a hardware store will do – just follow the instructions on the glue container and everything will work fine. Our customers have often used Elmer's Glue or Amazing Goop with satisfactory results but really – your nearest hardware store will be the best source. Contact cement is recommended, as are other glues that don't cure instantly, as they will allow you to make adjustments before they bond. In either case – make sure you follow instructions on the glue you've chosen!




6. Lay the cover flat and make sure to position the armrest over it. You do not have to remove existing covering if your armrest is in decent shape and it's top surface is even. Press the center of the armrest down to the cover and proceed pressing the edges in an outwards motion.



7. Create stress cuts in the cover to fold the material over. Once done so, apply glue on the back of the arm rest, as well as the cover. Wait until its dry to the touch then proceed to fold over.

8. Do small sections at a time to avoid any creasing in the material. This will allow for better finish on the final product.

9. Re-install everything in the reverse order of removal once the glue had cured.

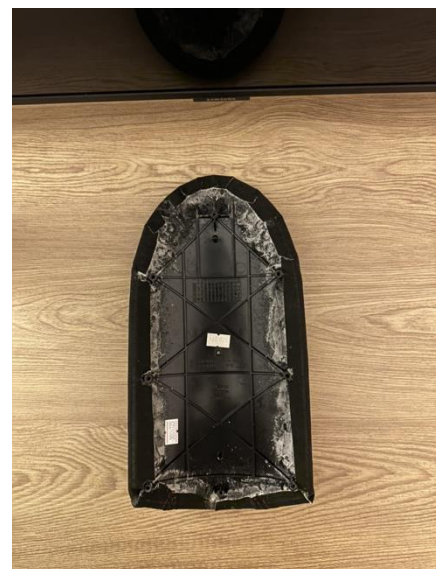

Congratulations! Enjoy your new armrest cover from RedlineGoods!

Useful tip

Make sure to condition your armrest properly, using the proper care products for the material you've chosen for your RedlineGoods item (leather and Alcantara require different treatments) and you'll enjoy it for years!