

# RedlineGoods Console Cover Installation

## Instructions for the Mazda 3 (BP)


### *Tools needed:*

- Custom made RedlineGoods Mazda 3 (BP) Console Covers
- Small Flathead Screwdriver
- #2 Phillips Screwdriver
- Small pliers
- Small mirror
- Exacto / Hobby Knife / Scissors
- Contact Cement (Barge All Purpose Cement works great)


1. Unplug Negative battery terminal, then remove the small cover in front of "P" on the console. Insert a tool to depress the button inside (a screwdriver works) and while depressing move the gear selector to the "D" position. Remove tool.



2. Insert a tool (a small flat head screwdriver works) and move the tool in the direction of arrow (1) to detach the hook. Move the lock release button cover in the direction of the arrow (2) and remove it.

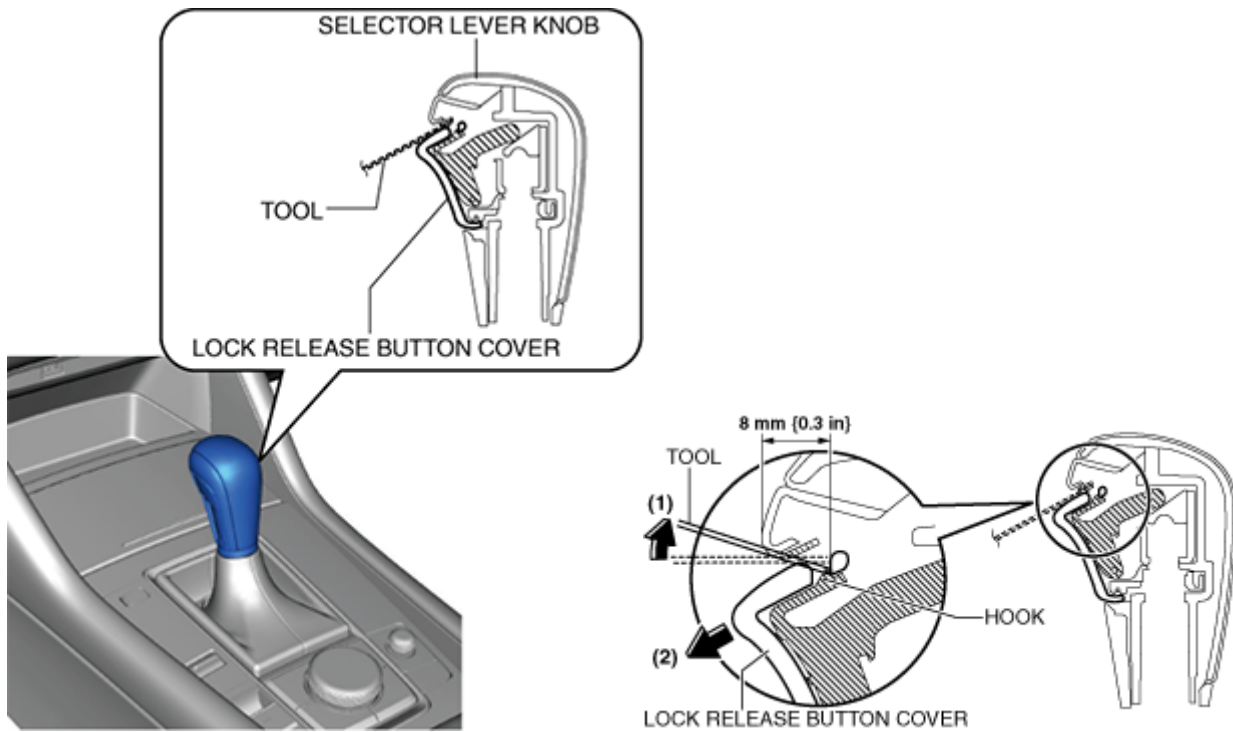


- Using a mirror (helps with seeing what you're doing) and pliers, remove the spring clip from inside the shift knob and lift the knob off..

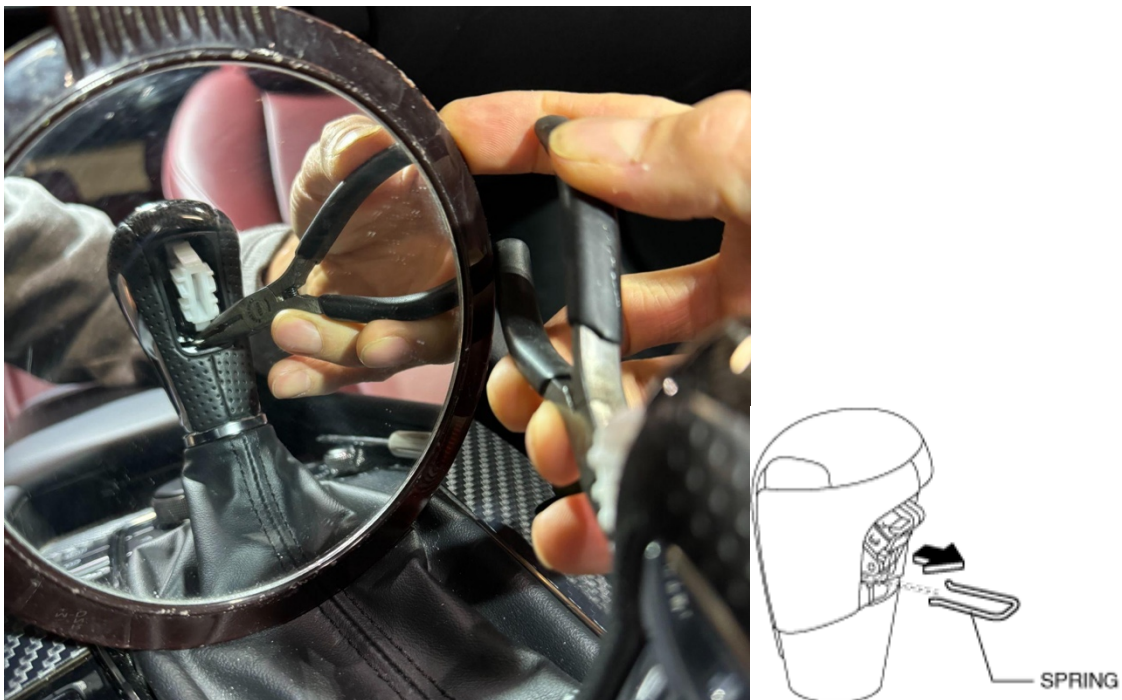

- Pull up the backside of the console until it unclips but be careful to not pull too far, there are several wire harnesses attached underneath.




5. Begin detaching the wires. There will be 4 total connectors and a clip holding 2 of them to the console.

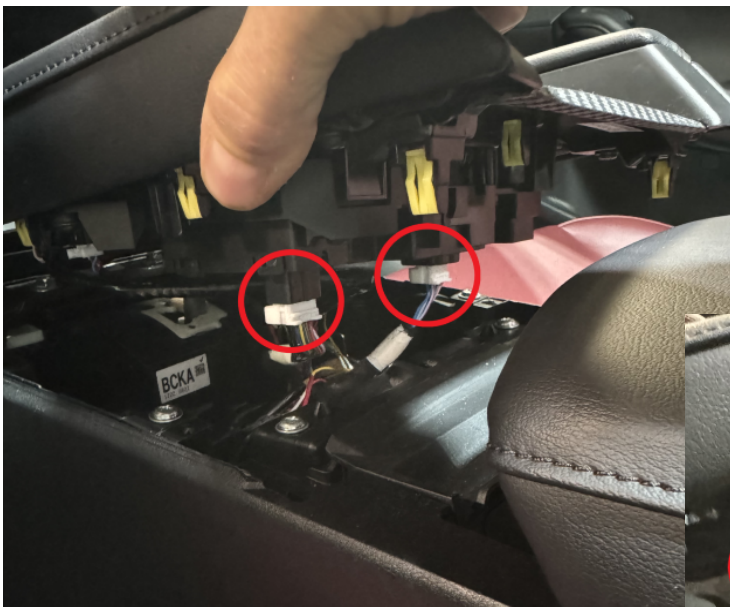

6. Remove the 4 Phillips screws (red) and unhook the 2 the main console.

from

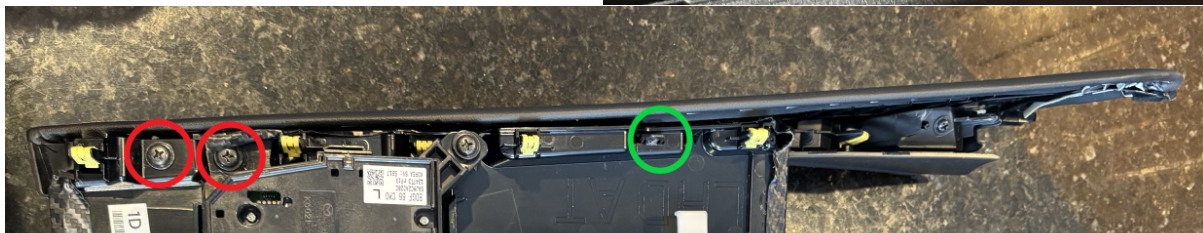

7. Remove the 6 Phillips screws from the side console pieces. Repeat for the other side. Separate the backer plate from the console piece.



8. Use a screwdriver to pry the backer plate from the console piece.



9. new piece and the base piece out on a table and put a layer of adhesive along the black unfoamed line of the base piece and the stitching on the backside of the leather. Don't go too thick here, you don't want adhesive seeping through the seam.



10. Put a layer of adhesive on the interior perimeter of the base and the backside perimeter of the leather. Then work your way around the perimeter, pulling tight and sticking the edges in place. Some trimming may be necessary.



11. Reattach the backer plate to the console piece. Then repeat steps 9-11 for the other side.



12. Attach both side console pieces to the main console and reinstall in the car, being sure to plug all four connectors back in.

### **Useful tip**

You have installed a product made out of genuine leather. As you know, to maintain a leather product in good condition, you should take care of it. We suggest occasionally (every 4-6 week for example) applying some

leather conditioner/UV protector to keep your leather from drying up in the sun and cracking.

**Redline Automotive Accessories Corp. will not be held liable for any labor, incidental or consequential damages of any kind. Proceed at your own risk.**