

RedlineGoods Shift Boot Installation

Instructions for the Mazda 3 (BP)


Tools needed:

- Custom made RedlineGoods Mazda 3 (BP) Shift Boot
- Small Flathead Screwdriver
- #2 Phillips Screwdriver
- Small pliers
- Small mirror
- Exacto / Hobby Knife / Scissors
- Contact Cement (Barge All Purpose Cement works great)

1. Unplug Negative battery terminal, then remove the small cover in front of "P" on the console. Insert a tool to depress the button inside (a screwdriver works) and while depressing, move the gear selector to the "D" position. Remove tool.



2. Insert a tool (a small flat head screwdriver works) and move the tool in the direction of arrow (1) to detach the hook. Move the lock release button cover in the direction of the arrow (2) and remove it.

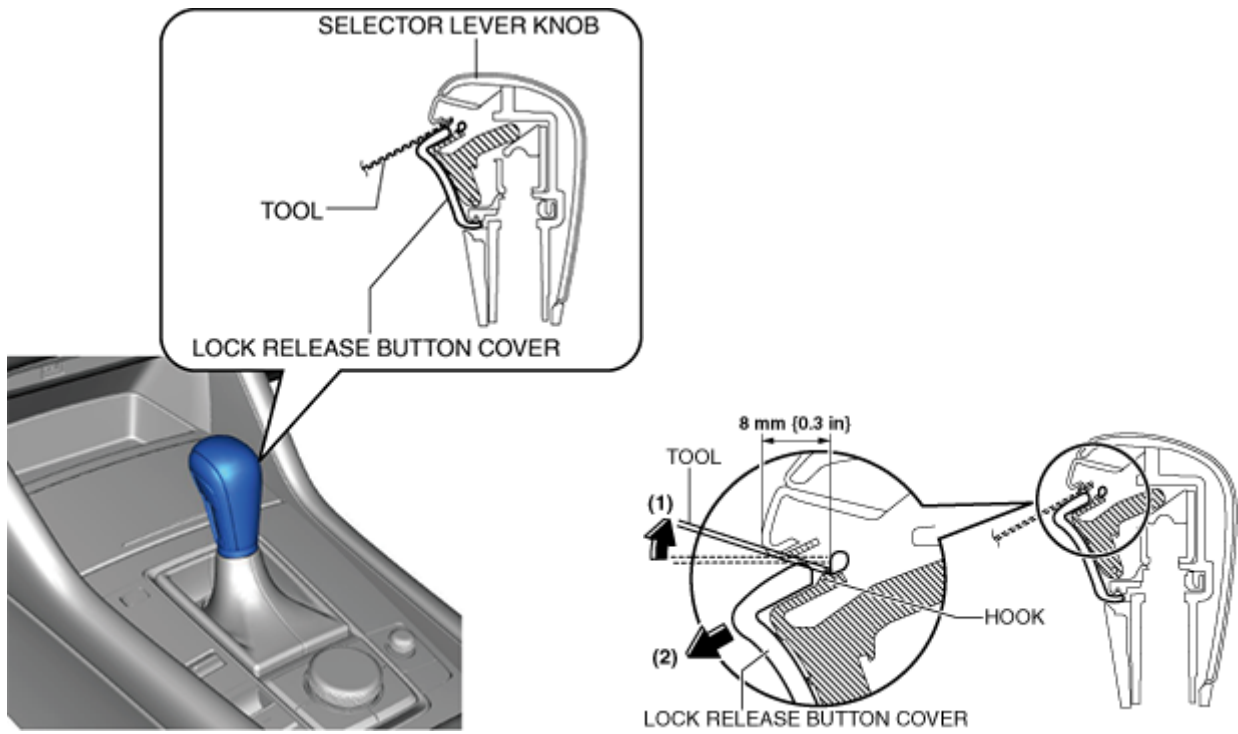


1. Using a mirror (helps with seeing what you're doing) and pliers, remove the spring clip from inside the shift knob and lift the knob off..




3. Pull up the backside of the console until it unclips but be careful to not pull too far, there are several wire harnesses attached underneath.



4. Begin detaching the wires. There will be 4 total connectors and a clip holding 2 of them to the console.

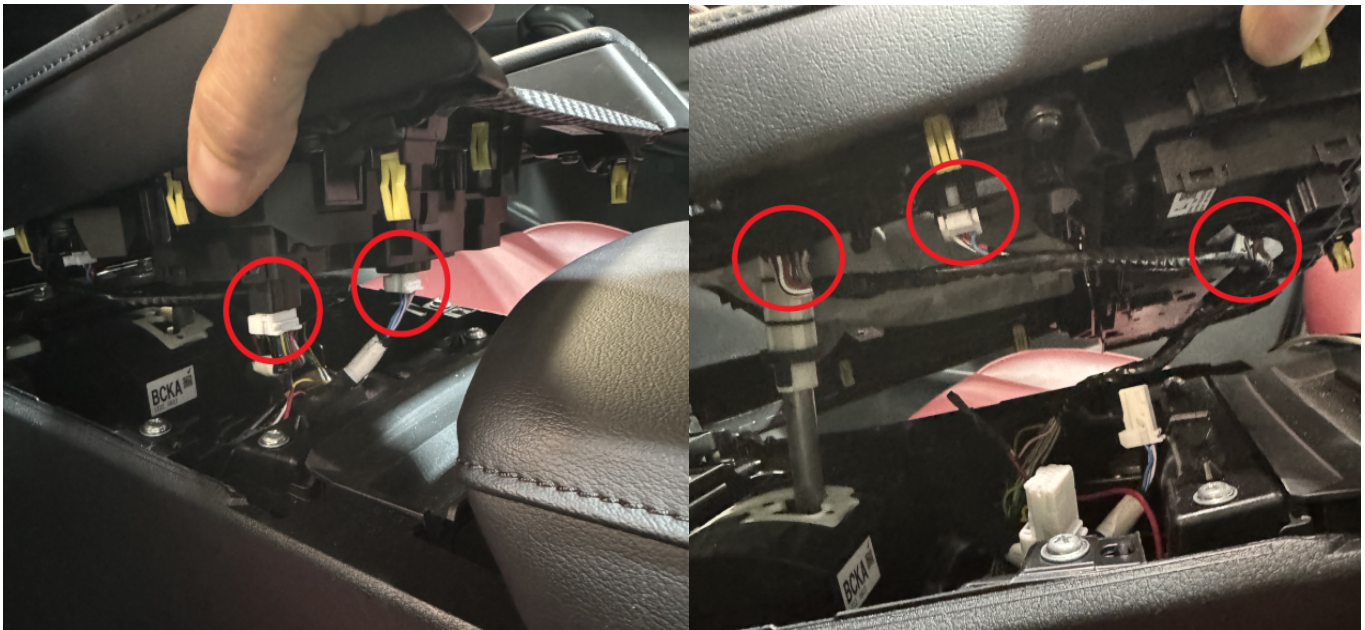

5. Remove the 2 Phillips screws (red) and pull the white plastic frame/boot assembly out of the console.

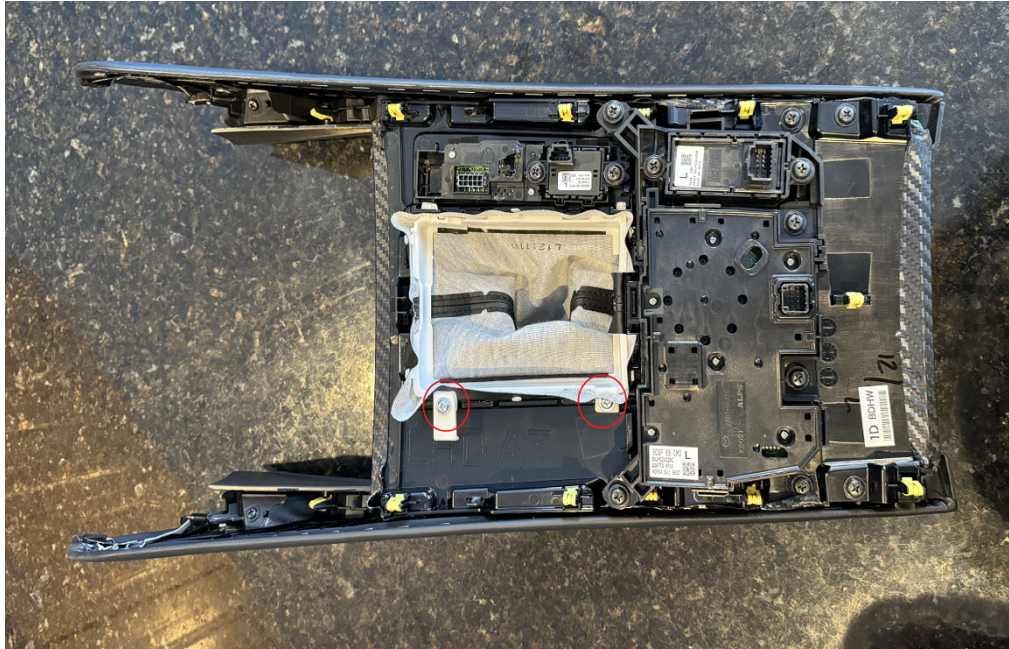

6. Detach the boot from the white frame.



7. Turn the boot inside out and remove the plastic ring.



8. Turn the new boot inside out. Place cement on the ring and the upper perimeter of the boot.



9. Place the ring over the boot, pressing it in place around the perimeter of the ring, and turn right side out.



10. Place the boot back on the white frame.



11. Place the boot assembly back in the console, screw the two screws back in, and reinstall the console in the car, being sure to plug all four connectors back in.

Useful tip

You have installed a product made out of genuine leather. As you know, to maintain a leather product in good condition, you should take care of it. We suggest occasionally (every 4-6 week for example) applying some

leather conditioner/UV protector to keep your leather from drying up in the sun and cracking.

Redline Automotive Accessories Corp. will not be held liable for any labor, incidental or consequential damages of any kind. Proceed at your own risk.